

ES2004S Install Instructions



- 1: Measure length of tie rod assembly from end to end before disassembling-note length.
- 2: Spray penetrating fluid on threads of sleeve and clamps.
- 3: Remove outer tie rod end, cotter pin and nut.
- 4: Pop taper loose and UN thread end and sleeve.
- 5: Re assemble to original length.
- 6: Tighten outer nut to proper torque- install new cotter pin.
- 7: Tighten sleeve clamps
- 8: Have an alignment done. (Toe in will be affected)