



Tie Rod Ends Install Instructions

1. Measure length of tie rod assembly prior to disassembly-note length
2. Spray penetrating fluid on threads , loosen sleeve clamp
3. Remove cotter pin and loosen tie rod nut, pop taper loose
4. Un thread tie rod from sleeve
5. Lube threads on new tie rod ends
6. Install and adjust to length measured
7. Tighten nut, install cotter pin and tighten clamp
8. Have an alignment done (Toe in will be affected)

NOTE: Check tapered stud in mating part, if the stud can be rocked or had been previously bent or broken. Failure to replace worn parts may result in stud breaking or separation of stud and nut. Refer to specific vehicle instructions for proper torque settings.