



Steering Control

INSTALLATION INSTRUCTIONS

For
G-001-K3

Parts Needed:

41-230
G-001K3

SAFE T PLUS UNIT (Blue)
Mounting Hardware Kit consisting of:
16-800 1-1/4" X 3/4" X 1" Spacer
55-208 Tie Rod Bracket
12-38-1750K 3/8X1-3/4" U- Bolt Kit
10-8-450 3/4-16X4-1/2" Kit
14-800 3/4-16 Stover Lock Nut
15-850 3/4" Flat Washer

Spacer mounts to driver's side of airbag & shock mounting housing. There are two (2) holes in the bottom of the casting. The hole furthest to the rear of the coach is the one the SAFE T PLUS unit is mounted. **THIS HOLE MUST BE DRILLED OUT TO A DIAMETER OF 3/4"**.

1. Set front wheels of vehicle to a straight-ahead position. **THIS IS IMPORTANT.** Later adjustment of the Tie Rod Bracket may be avoided if front wheels are set perfectly straight.
2. After enlarging 1/2" hole in airbag plate, insert 3/4" X 4-1/2" bolt from top through hole, Install Spacer on bolt, then SAFE-T-PLUS unit **LARGE** end, washer & locknut.
3. Put the U-Bolts used to mount the Tie Rod Bracket, over the tie rod. Place bracket on the U-Bolts, on the bottom side of the tie rod, with the SAFE T PLUS unit mounting hole to the rear of the vehicle. Put the nuts provided for the U-Bolts on, but **DO NOT TIGHTEN.**


Thoroughly clean the section to tie rod before attaching bracket.

4. Place a 3/4" flat washer on the 3/4-16 X 3-1/2" bolt and insert the bolt through the eyelet on the **SMALL** end of the SAFE T PLUS unit. Insert the bolt into the unit mounting hole in the Tie Rod Bracket from the top side. Fasten a locknut and tighten with a wrench enough to allow the unit eyelet to easily rotate around the mounting hole.
5. Make sure that the groove on the Tie Rod Bracket is aligned on the tie rod and tighten the nuts on the U-Bolts snug against the tie rod.
6. Tighten the nuts on the 3/4" bolts to approximately 80-90 foot pounds of torque.

7. Loosen the nuts on the U-Bolts and allow the SAFE T PLUS unit to "find its center".
Re-tighten nuts to 25-35 foot pounds of torque.
8. Check to be sure installed unit clears all other parts of vehicle by turning steering wheel to both extremes right and left positions. If unit scrapes or binds at any point, review these instructions and make necessary corrections by rotating unit on the tie rod to obtain necessary clearance.
9. **ROAD TEST & ADJUSTMENT PROCEDURES:** See Attached Documents.

After your first road trip with Safe T Plus Steering Control installed, please let us know how Safe T Plus performed. We enjoy hearing from our clients. You may contact us at support@safe-t-plus.com or (800) 872-7233.

NOTE: IT IS IMPORTANT THAT TIGHTENING PROCEDURES ARE FOLLOWED IN THE ORDER LISTED IN THESE INSTRUCTIONS FOR PROPER INSTALLATION TO BE ACHIEVED.

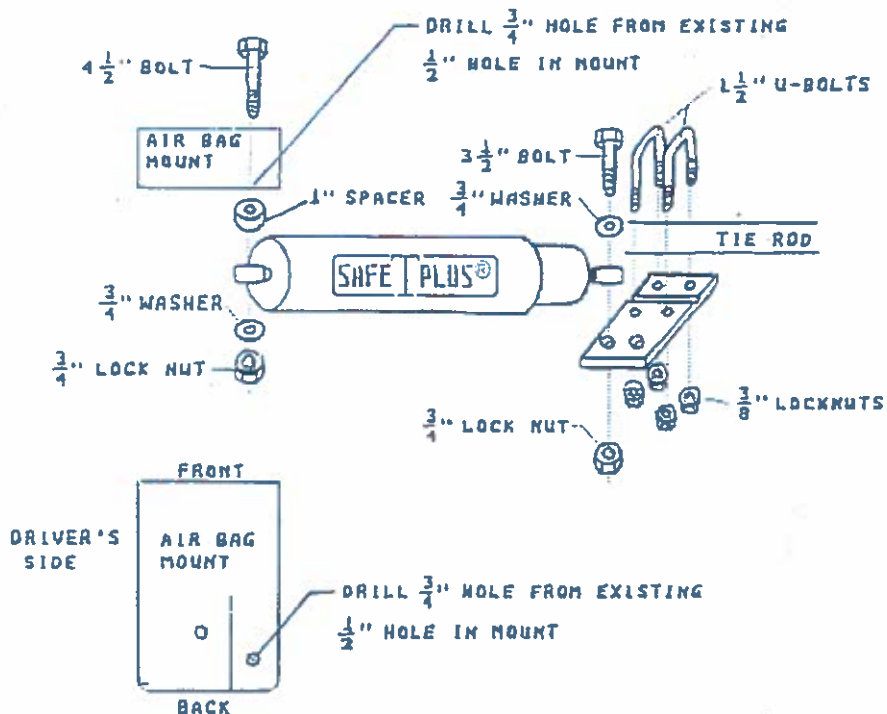



Road Test & Centering/Adjustment Procedures

To ensure proper alignment and installation of the SAFE-T-PLUS unit, the vehicle should be road tested. Take along a 9/16" deep well socket wrench to fit the U-bolts on the tie rod. While driving on a straight stretch of road, vehicle should easily follow a straight course, if not, adjustment is necessary.

To adjust Safe-T-Plus Steering Control follow the below instructions:

1. After installation, test drive the vehicle
2. Try to test with the most perfect conditions: straight road, no crown, limited wind (if possible), freeways seem to work best or large parking lots.
3. Hold steering wheel in a straightforward position to determine if the vehicle is tracking straight or pulling to the left or the right.
4. Stop vehicle, and set brakes.
5. Take note of where the steering wheel *must be held* to track straight down the road, and mark it accordingly. Pull in somewhere, and with the motor, steering pumps, all running. Have someone hold that steering wheel firmly in exactly the proper position.*
6. Underneath the vehicle, slightly loosen nuts on tie rod U-bolts and allow unit to self-center. tap the Safe-T-Plus unit a few times with your fist, or a rubber mallet, and let the internal spring push / pull the tie rod bracket into a neutral position. (Frequently this slight movement is not noticeable)
7. At this point, take a moment to square-up the U-bolts as they lay up and across the tie rod. If you've left them askew, they may pull the bracket out of position as they tighten.
8. Retighten the U-bolt nuts (only 25-30lbs. of torque)
9. Now test drive again.
10. Repeat this step if necessary until vehicle will hold a straight line**

Note:

*Be mindful that if you are holding 2 to 3 inches of steering wheel against the spring to track straight, it's only 1/16 to 1/8 of an inch down below on the tie rod bracket.

**Repeat if necessary, until you're satisfied. Once completed you should be able to achieve holding your lane position for a 1/2 mile or so at freeway speeds, with hand gently resting on the steering wheel without correcting.


Extra Detail on Final Adjustments (Tips)

- Using tape, you can stick a ruler or pencil to the dash to act like a centering indicator for more accuracy.
- Another trick is marking the left and right limits of any inherent slop in the center of the steering wheel operation. At the shop, line up the center marks, and do the install.
- Be patient, be precise when moving the tie rod bracket, as just a 1/16 of an inch will make the difference in drifting off half a lane in 100 yards or less.

When making very small adjustments, (1 ½ inches of steering wheel displacement or less) it may be necessary to hold the steering wheel in the direction of correction just a little beyond the required (¼ to ½ inch more) in order to “load up” the internal spring just a little and let the unit help with the relocation of the tie rod bracket. There really isn’t any other way to move the tie rod bracket without having some assistance holding the steering wheel while adjustments are being made down below.

If overshooting the desired results, mark a line a set distance from the tie rod bracket so that they can measure in what direction, and how far each adjustment was made.

A “how-to” properly center/adjust Safe-T-Plus Steering Control video is available on our website to help guide you through the adjustment procedures. Feel free to check out video at www.safe-t-plus.com (bottom right).

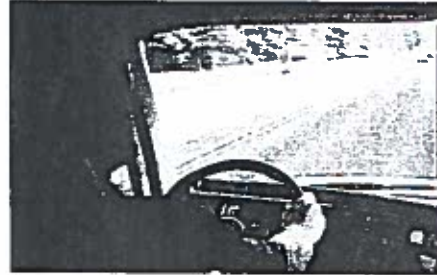

If you need additional assistance, please call us toll-free (800) 872-7233 or email us at info@safe-t-plus.com and technical support will be happy to assist.